



electrical connection

3300a rifle range rd

knoxville . tn . 37918

tel 865 . 219 . 9192

fax 865 . 219 . 9292

www.electricalconnection.com

info@electricalconnection.com

04151, 05/19/17, ver 1

Polaris
Slingshot
alarm system
operation guide

Alarm operation.

Arm.

Press the 'LOCK' button on your remote with your ignition off (top button). This will arm the alarm. Your Slingshot will flash the turn signals once then chirp the siren. If you want to disable the shock sensor, press and release the LOCK button and press again for 2 seconds.



Disarm.

Press the 'UNLOCK' button on your remote (button 2). This will turn off the alarm and flash your turn signals twice. This will also illuminate your cockpit/ground lights for 60 seconds. If you want the lights on again, simply press the UNLOCK button again.



Keyless basic mode (no alarm).

Press and hold the UNLOCK button for 2 seconds with the alarm disarmed and the ignition on. You can also use the valet switch to select/unselect this option. To enter/exit keyless basic mode, turn the ignition on and press the valet switch for 5 seconds at the same time. Your LED dash indicator will turn steady.

LED indicator.

- no trigger – LED flash rapidly.
- ignition – 1 flash & 1 pause
- pin switch activated – 2 flash & 1 pause
- aux input (green wire) activated – 4 flash & 1 pause

Panic & Slingshot locator.

Press and hold the PANIC button on the remote for 2 seconds (third button down). This will trigger the siren and flash the turn signals. This is a great feature if you are unable to locate your Slingshot. Press again to disable. To stop panic mode if the remote is absent, turn ignition on and press and hold the valet switch until the siren stops.



Valet switch.

To stop the siren, turn ignition on and press and hold the valet switch until horn stops (lost remote). To enter/exit keyless basic mode, turn the ignition on and press the valet switch for 5 seconds at the same time. Your LED dash indicator will turn steady.

Remotes.

Battery replacement.

Remove the 3 screws from the back of the housing. Remove cover. Gently lift the PC board from the housing. Remove the battery. Battery type is '27A'. 12 volt. Positive side to the top (opposite the spring).

No operation.

If the LED on the front of the remote does not illuminate or the alarm does not turn on or off, replace the battery in the remote. See above for instructions and type.

Program remote.

Turn ignition on, press and release the valet switch 5 times. Siren will chirp once and turn signals and LED indicator will stay on. Press the lock button on each remote to be programmed. Siren will chirp and the turn signals will flash to confirm each remote has been programmed. Turn ignition off. Up to 4 remotes can be programmed. After 10 seconds without any programming activity, or if the ignition is turned OFF, the alarm will automatically exit the programming mode.

Please keep this manual for reference.

